

# HEAT GUN

## OWNER'S MANUAL



Before Using Be Sure to Read  
This Manual



**HOBBY SQUADRON LTD.**

No. 209, Jinghe E. St., Beitun District,  
Taichung City 40642, Taiwan (R.O.C.)  
TEL: 886-4-24380007 FAX: 886-4-24377500  
Email: service@ty1.com.tw <http://www.ty1.com.tw>

### **SPECIAL CAUTION FOR HEATING GUN:**

- 1.If heat gun doesn't turn on when switch is in any "ON" position, turn switch back to "OFF" position at once. And then, please send it to an authorized service location for repair.
- 2.Not to touch the metal nozzle when the gun is in use. Severe burns could result, because of high temperature of the nozzle.
- 3.Due to the high heat, the nozzle will discolor in use. And a small amount of smoke may also be noticed during the initial use. This is normal and will not affect the life of the unit.
- 4.For rapid cooling the unit, please stand the unit in an upright position when you shut off the heat gun.
- 5.Never use the heat gun for hair drying or for drying off clothes while it is being worn.
- 6.Avoid using the heat gun in an atmosphere containing explosive or combustible gases. Do not drop the heat gun or jar its nozzle; such mechanical shocks can cause damage to the unit.

### **HELPFUL TIPS:**

**For Removing Paint** - The heat gun is an efficient tool for removing paint from wood. Removal of paint by using heat is based on the fact that all organic paints soften at elevated temperature. When soft, the paints can easily scraped off without damage to the surface. Keep in mind that you are not trying to burn off the paint, but rather just heating it enough to soften it so that it can be easily scraped off. The best method of paint removal is to move the gun slowly and steadily forward at an angle to the surface with nozzle pointed in the direction of motion.

**For Lifting Floor Tile** - Floor tile can be easily lifted by heating the tile to be removed, thus softening the adhesive backing. Inserting a blade such as a putty knife under the tile when the adhesive is soft will allow you to separate the tile from the floor.

**For Window Repair** - When using the heat gun near glass, great care must be taken to gradually bring the glass surrounding the area to be worked on up in temperature or shielding the glass from direct heat or you may crack the glass.

### **SPECIFICATIONS:**

High Temp. :	1000°F	Low Temp. :	600°F
Watts :	1500	Power Supply :	230V~50Hz
Noise Level :	dB	Vibration Level :	m/s <sup>2</sup>

**WARNING !!** When using electric tools, basic safety precaution should always be followed to reduce the risk of fire, electric shock and personal injury, including the following.  
Read all these instructions before operating this product and save these instructions.

**1. Keep work area clean**

-Cluttered areas and benches invite injuries.

**2. Consider work area environment**

-Do not expose power tool to rain. Do not use power tools in damp or wet locations. Keep work area well lit. Do not use power tools where is risk to cause fire or explosion.

**3. Guard against electric shock**

-Avoid body contact with earthed or grounded surface(e.g. pipes, radiators, ranges, refrigerators).

**4. Keep Children away**

-Do not let visitors touch the tool or extension cord. All visitors should be kept away from work area.

**5. Store idle tools**

-When not in use, tools should be stored in a dry, high, or locked up place, out of reach of children.

**6. Do not force the tool**

-It will do the job better and safer at the rate for which it was intended.

**7. Use the right tool**

-Do not force small tools or attachments to do the job of a heavy duty tool. Do not use tools for purpose not intended.

**8. Dress properly**

-Do not wear loose clothing or jewellery, then can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protecting hair covering to contain long hair.

**9. Do not abuse the cord**

-Never carry the tool by the cord or yank it to disconnect it from the socket. Keep the cord away from heat, oil and sharp edges.

**10. Secure work**

-Use clamps or a vice to hold the work. It is safer than using your hand and it frees both hands to operate the tool.

**11. Do not overreach**

-Keep proper footing and balance at all times

**12. Maintain tools with care**

-Inspect tool cord periodically and if damaged have it repaired by an authorized service facility. Inspect extension cords periodically and replace, if damaged. Keep handles dry, clean and free from oil and grease.

**13. Disconnect tools**

-When not in use and before servicing.

**14. Avoid unintentional starting**

-Do not carry a plugged-in tool with a finger on the switch. Ensure switch is off when plugging in.

**15. Use outdoor extension lead**

-When tool is used outdoors, use only extension cords intended for outdoor use.

**16. Stay alert**

-Watch what you are doing. Use common sense. Do not operate tool when you are tired.

**17. Check damaged parts**

-Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated in this instruction manual. Have defective switches replaced by an authorized service facility. Do not use the tools if the switch does not turn it on and off.

**18. Warning**

-The use of any accessory or attachment, other than those recommended in this instruction manual, may present a risk of personal injury.

**19. Have your tool repaired by a qualified person**

-This electric tool is in accordance with the relevant safety requirements. Repairs should only be carried out by qualified person using original spare parts, otherwise this may result in considerable danger.