



# Thrust Meter

## Operating Instructions


BATTERY: AAA x 3  
 RANGE: 5 ~ 9,995g  
 MINIMUM CALIBRATION: 5g  
 UNIT: kg, oz, lb  
 MAX. MOTOR DIAMETER: 60mm  
 POWER: AUTO CUT OFF



To replace the batteries, remove the six screws from the bottom of the Thrust Meter.




Replace the three AAA size batteries in the battery holder and re-fit the retaining screws.

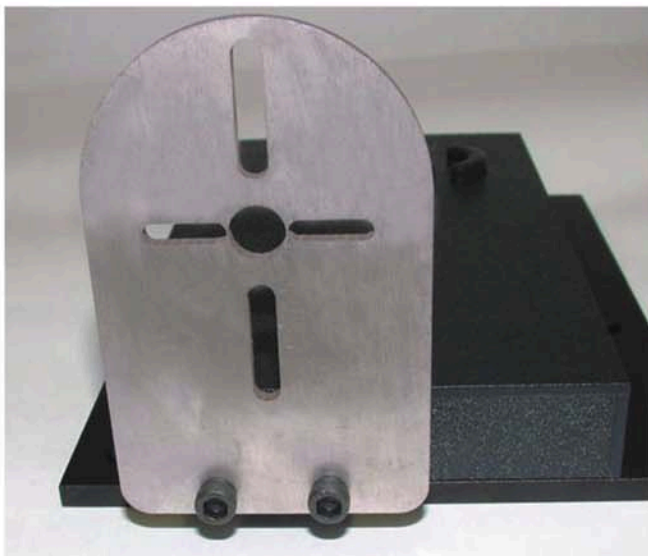

Fit the motor mount as shown.




Fit the motor to be tested to the motor mount on the Thrust Meter.

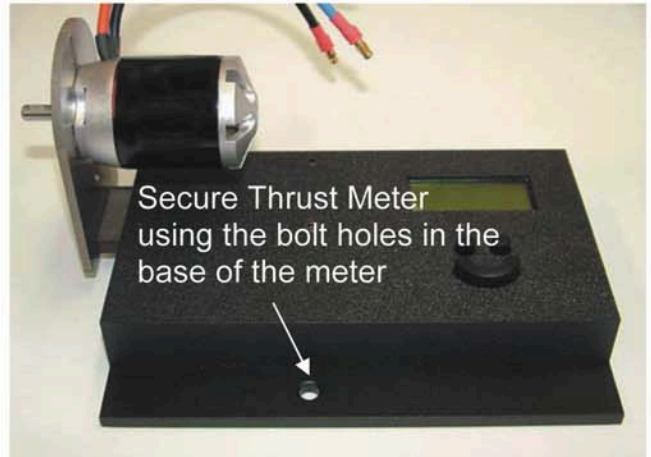

Secure Thrust Meter using the bolt holes in the base of the meter

**WARNING!** Thrust Meter should be secured to a work bench or test stand before use.

Zero/reset button

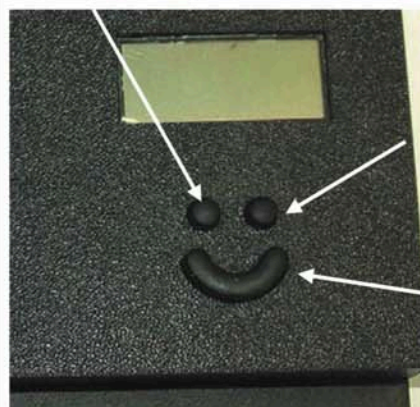

Unit of measurement selector switch. KG, LB or OZ

On/off button